

Golf Cart Operation

- **Driver MUST have a valid drivers license to drive on public road BEFORE starting the vehicle**

- Check for correct tire inflation.
- Inspect for fluid leaks.
- Inspect battery fluid levels and make sure the batteries are not dry.

STARTING the vehicle

- Apply the parking brake (top part of brake pedal).
- Make sure that the forward-neutral-reverse (f-n-r) lever is in neutral before starting the vehicle.
- Turn the key in the ignition switch to the “ON” position.
- Move the f-n-r level to the desired direction (forward or reverse).
- Release the parking brake by pressing the lower part of the brake pedal.
- Press the accelerator pedal.
- Always check behind you when reversing.

OPERATING the vehicle

- Keep feet, legs, hands and arms inside the vehicle at all times.
- Always remain seated and hold on while the vehicle is in motion.
- Sudden stops or change of direction may result in loss of control.
- Use the brake to control speed when traveling down an incline.
- Slow down before and during turns.
- Always bring the vehicle to a complete stop before using the f-n-r lever

STOPPING the vehicle

- Always park on flat ground.
- Apply the parking brake.
- Put the f-n-r lever to neutral.
- Turn the ignition key to “OFF”.

